STAIRVILLE

SH-150

hazer

th•mann
MUSIC IS OUR PASSION

user manual

Musikhaus Thomann e.K.
Treppendorf 30
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

13.11.2014, ID: 170702

Table of contents

1 **General notes** 4
2 **Safety instructions** 7
3 **Features** 13
4 **Installation** 14
5 **Connections and operating elements** 15
6 **Operation** 21
7 **Technical specifications** 24
8 **Troubleshooting** 25
9 **Cleaning** 26
10 **Protecting the environment** 28

1 General notes

This user manual contains important information on safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to other users, be sure that they also receive this manual.

Our products are subject to a process of continuous development. We therefore reserve the right to make changes without notice.

Symbols and signal words

This section provides an overview of the symbols and signal words used in this user manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.

Warning signs	Type of danger
	Warning – high-voltage.
	Warning – flammable substances.
	Warning – harmful or irritating substances.
	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended to be used to produce fine haze by vaporising fog fluid. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety

DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.

DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.

WARNING!

Risk of burns from flammable liquids

The use of flammable liquids in this device may cause severe burns and damage to property.

Always use approved fog fluids. Never fill flammable liquids into the tank of the device.

WARNING!

Risk of slipping caused by condensation

Fog machines can produce condensation. Do not direct the fog to floors. Floors and surfaces can become slippery by condensed fog.

Check at regular intervals whether it is possible to walk on the floors without a slipping hazard, and, if necessary, remove the condensation.

WARNING!

Health hazard caused by fog fluid handling

Fog fluid does contain glycols complying with the regulations for foodstuffs. However, it may be harmful if swallowed.

Do not induce vomiting. Seek medical advice immediately. Keep fog fluid in a safe place. If the fog fluid comes into contact with eyes rinse thoroughly with water.

CAUTION!

Possible respiratory problems

The device can be operated safely only with the approved fog fluid. The use of other fluids can release toxic gases. Claims for damages caused by the use of non-approved fluids shall be excluded.

Do not create fog in closed or poorly ventilated areas.

Do not expose persons with health problems (such as allergic respiratory conditions, asthma) to artificial fog.

NOTICE!

Risk of fire

Do not cover the device nor any ventilation slots. Do not place the device near any direct heat source. Keep the device away from naked flames.

NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.

NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

3 Features

This hazer is suitable for use in clubs, bars, discotheques and on stages.

Special features of the device:

- Remote control included
- Suitable for mobile use
- Large fluid container

4 Installation

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

The unit requires 20 cm clearance on the sides and above. Place the unit on a flat, stable surface. The device must not be positioned with more than 15° inclination during operation.

5 Connections and operating elements

Front panel

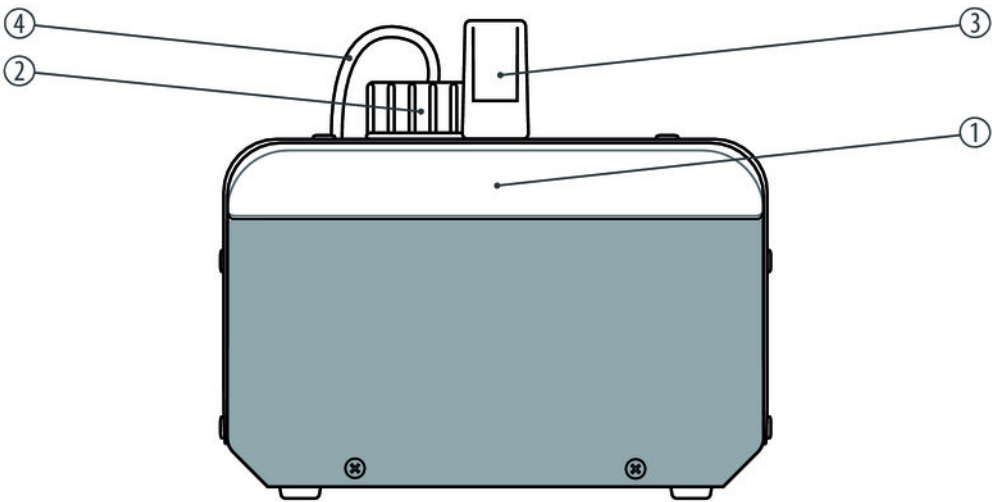

1	Haze outlet.
2	Fluid container with screw-cap.
3	Carrying handle.
4	Fog fluid feed line from fluid container to vaporiser.

Rear panel

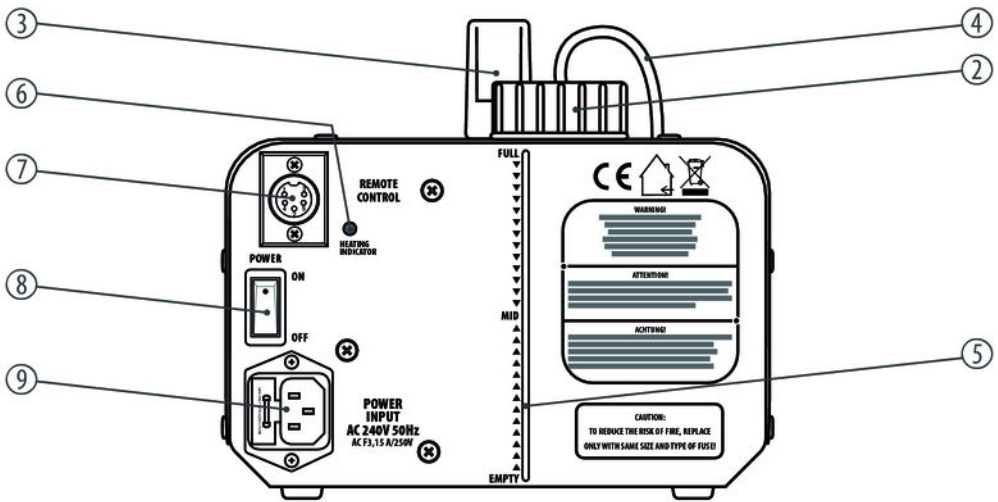
3
4
6
2
7
REMOTE CONTROL
HEATING INDICATOR
POWER
ON
8
OFF
9
POWER INPUT
AC 240V 50Hz
AC F3,15 A/250V
FULL
MID
EMPTY
WARNING!
ATTENTION!
ACHTUNG!
5
CAUTION:
TO REDUCE THE RISK OF FIRE, REPLACE ONLY WITH SAME SIZE AND TYPE OF FUSE!!

2	Fluid container with screw-cap.
3	Carrying handle.
4	Fog fluid feed line from fluid container to vaporiser.
5	Liquid level indicator.
6	**HEATING INDICATOR** This status LED indicates that the unit is heating up.
7	**REMOTE CONTROL INPUT** Connection for the remote control.
8	**POWER** Mains switch to turn the device on or off.
9	**POWER INPUT** IEC chassis connector with fuse holder for operating voltage supply.

Remote control

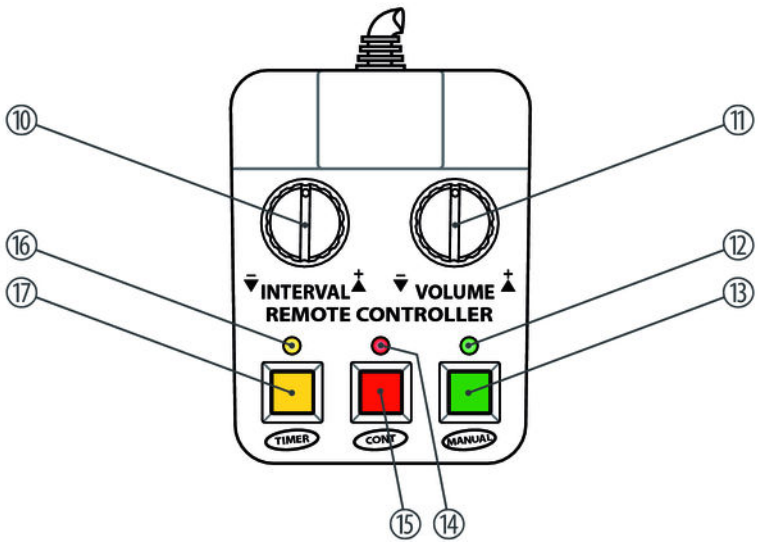

10	Rotary control **INTERVAL** This control lets you adjust the time interval between two haze bursts in a range of 10 to 200 seconds.
11	Rotary control **VOLUME** With this control you can set the amount of haze per burst to be produced (between 0 % and 100 %).
12	The green status LED indicates that the unit has reached the required operating temperature for haze generation.
13	Button **MANUAL** Press this button to output the maximum amount of haze regardless of the other settings.
14	The red LED indicates that the device is heating up.
15	Button **CONT** Press this button to turn continuous operation on or off. In this mode, that amount of haze is continuously output, that you have set with the **VOLUME** control.
16	The yellow status LED indicates that the Timer function is active.
17	Button **TIMER** Use this switch to turn the Timer function on or off. In this mode, the amount of haze set by the **VOLUME** control is output within the time intervals that you have set with the **INTERVAL** control.

6 Operation

Filling the unit

NOTICE!

Possible damages caused by unsuitable fog fluid

Fog liquids not approved by the manufacturer may permanently damage the unit.

Only use the fog fluids listed on *www.thomann.de* and follow their instructions for use.

First, make sure the unit is switched off.

Open the screw-cap of the container and fill in the fog fluid. Make sure that no fluid is spilled or gets into the device. The easiest way is using a funnel. The container capacity is 1.0 litre.

Screw the cap firmly back in.

Turning the unit on

NOTICE!

Fire hazard

Do not operate the machine unattended.

Make sure that the remote control is connected.

Connect the device to the power grid and turn it on with the main switch. The **HEATING INDICATOR** LED on the unit and the red LED on the remote control light up, thus indicating that the unit is heating up.

As soon as the required operating temperature is reached, the green LED on the remote control lights up. The unit is now operational.

Operating modes

The device supports the following operating modes which can be selected with the remote control:

- Manual operation with maximum amount of haze

  Press the **MANUAL** button. This mode takes precedence over all others. That means that you don't have to turn off the timer function and continuous operation, before you press the button.
- Continuous operation with adjustable haze output

  In this mode, the amount of haze that you have set with the **VOLUME** control is ejected uniformly. Press the **CONT** switch to turn this mode on or off.
- Timer controlled operation with adjustable haze output

  In this mode, the amount of haze that you have set with the **VOLUME** control is periodically ejected (adjustable with the **INTERVAL** control). Press the **TIMER** switch to turn this mode on or off. The yellow LED lights up when the timer function is active. Each haze ejection lasts for about 13 seconds.

Turning the unit off

Turn off the power using the main switch. Transport the device only when it is completely cooled down. To avoid leaking fog fluid during transport, you should transport the device only with empty fluid container.

7 Technical specifications

Heater power	450 W
Haze output	ca. 35 m^3/min
Fluid container capacity	1.0 l
Warm-up time	approx. 9 min
Fuse	3.15 A / 250 V, fast-acting
Dimensions (W × D × H)	170 mm × 395 mm × 185 mm
Weight	4.2 kg

8 Troubleshooting

In the following we list a few common problems that may occur during operation. We give you some suggestions for easy troubleshooting:

Symptom	Remedy
The unit does not work	Check the mains connection and the main fuse.
The unit does not eject any haze	1. Check the fluid level in the container.
	2. Check the connection to the remote control.
	3. Switch the device off and check the hose that leads into the fluid container for flow.

If the procedures recommended above do not succeed, please contact our Service Center. You can find the contact information at *www.thomann.de*.

9 Cleaning

NOTICE!

Possible damages caused by unsuitable cleaning agents

Cleaners not approved by the manufacturer may permanently damage the unit.

Only use the fog machine cleaners listed on *www.thomann.de* and follow their instructions for use.

Clean the appliance after every 30 operating hours, or if it was not in use for a longer period of time.

Procedure

1. Make sure that the device is turned off, disconnected from the mains and completely cooled down.
2. Place the unit in a well ventilated place.
3. Take the suction hose out of the flluid container of the fog machine and put it into the bottle with the cleaning fluid.

4. Connect the device to the mains and turn it on with the main switch. The red lights on the device and on the remote control light up and thereby indicate that the unit heats up.

5. As soon as the required temperature is reached, the green LED on the remote control lights up.

   Switch the unit to continuous operation and release fog for about 20 seconds.

6. Put the suction hose back into the fluid container of the fog machine and release fog for another 20 seconds. This rinses the pipes.

   ⇨ The cleaning is completed.

10 Protecting the environment

Disposal of the packaging material

For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE). Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.